

location	description	PROEL SPARE CODE
11	HPX4600/6000-AUX PSU MODULE-RCC-16V-5V	96PCASAE430000
13	HPX4600/6000-DISPLAY MODULE	96PCASAE140070
2	HPX4600/6000-OUTPUT MODULE	96PCASAE130010
4	HPX4600/6000-PRE-AMP MODULE-A	96PCASAE315100
9	HPX4600/6000-PRE-AMP MODULE-B	96PCASAE315200
7	HPX4600-120V-EMI-EMC MOUDLE-3H-1T-EMC.PCB	96PCASAE370040
6	HPX4600-120V-PSU MODULE-3H-4.8KW-V (120V)	96PCASAE324900
12	HPX4600-CONTROL MODULE-3H-CTRL.PCB	96PCASAE324310
7	HPX4600-EMI-EMC MOUDLE-3H-1T-EMC.PCB (230V)	96PCASAE370020
1	HPX4600-INPUT MODULE	96PCASAE120050
3	HPX4600-OUTPUT STAGE MODULE-A	96PCASAE160170
8	HPX4600-OUTPUT STAGE MODULE-B	96PCASAE160180
5	HPX4600-PROT MODULE	96PCASAE180080
6	HPX4600-PSU MODULE-3H-4.8KW-V (230V)	96PCASAE324300
7	HPX6000-120V-EMI-EMC MOUDLE-3H-1T-EMC.PCB	96PCASAE370030
6	HPX6000-120V-PSU MODULE-3H-4.8KW-V (120V)	96PCASAE324700
12	HPX6000-CONTROL MODULE-3H-CTRL.PCB	96PCASAE324111
7	HPX6000-EMI-EMC MOUDLE-3H-1T-EMC.PCB (230V)	96PCASAE370010
1	HPX6000-INPUT MODULE	96PCASAE120040
3	HPX6000-OUTPUT STAGE MODULE-A	96PCASAE160150
8	HPX6000-OUTPUT STAGE MODULE-B	96PCASAE160160
5	HPX6000-PROT MODULE	96PCASAE180090
6	HPX6000-PSU MODULE-3H-4.8KW-V (230V)	96PCASAE324202

