

MOOER

MICRO LOOPER

Loop Recording Pedal

Owner's Manual

Precautions

PLEASE READ CAREFULLY BEFORE PROCEEDING

Power Supply

Please connect the designated AC adapter to an AC outlet of the correct voltage. Please be sure to use only an AC adapter which supplies 9V (±10%) DC, center minus. The maximum working voltage shall not exceed 12V, otherwise may be dangerous equipment damage, fire or other problems. Unplug the AC power adapter when not using or during electrical storms.

Connections

Always turn off the power of this and all other equipment before connecting or disconnecting, this will help prevent malfunction and / or damage to other devices. Also make sure to disconnect all connection cables and the power cord before moving this unit.

Cleaning

Clean only with a soft, dry cloth. If necessary, slightly moisten the cloth. Do not use abrasive cleanser, cleaning alcohol, paint thinners, wax, solvents, cleaning fluids, or chemical-impregnated wiping cloths.

Interference with other electrical devices

Radios and televisions placed nearby may experience reception interference. Operate this unit at a suitable distance from radios and televisions.

Location

To avoid deformation, discoloration, or other serious damage, do not expose this unit to the following conditions:

- Direct sunlight
- Heat sources
- Magnetic fields
- Extreme temperature or humidity
- Excessive dusty or dirty location
- High humidity or moisture
- Strong vibrations or shocks

FCC certification

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:


- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

Main Features

- Unlimited overdubbing, support 30minutes recording
- Can be used with a foot switch to record, play, stop, superimposed recording, deletion, the operation is very easy
- When the power supply is disconnected the loop or layered loops will be stored automatically

- Very small and compact design
- True bypass switch
- DC 9V adapter power supply

Panel Instruction

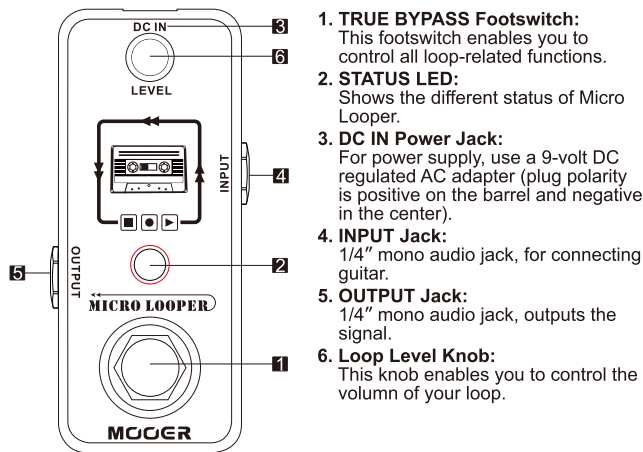

- TRUE BYPASS Footswitch:**
This footswitch enables you to control all loop-related functions.
- STATUS LED:**
Shows the different status of Micro Looper.
- DC IN Power Jack:**
For power supply, use a 9-volt DC regulated AC adapter (plug polarity is positive on the barrel and negative in the center).
- INPUT Jack:**
1/4" mono audio jack, for connecting guitar.
- OUTPUT Jack:**
1/4" mono audio jack, outputs the signal.
- Loop Level Knob:**
This knob enables you to control the volumn of your loop.

Connection

- Connect a 9V power supply to the DC input socket of Micro Looper.
- Connect your instrument to the input jack on the right side of the Micro Looper with an instrument cable.
- Connect the output jack on the left side of the Micro Looper to your amplifier or other pedals.

Operation

How to record Loops/overdub

- To start recording, press the footswitch once, the LED will be lit in RED, indicating Micro Looper is in Record mode.
- To switch to playback, press the footswitch again to quit Record mode. The LED will turn BLUE, and start playback.
- You can record another loop based on the original loop(Overdub), press the footswitch while the original loop is playing back, the LED will turn RED, indicating Micro Looper is in Record mode again.

- Press the footswitch once again to quit Record mode. The LED will turn BLUE. Micro Looper will playback both the original loop and the newly added overdub recording.

How to Undo recordings

- To delete your last recording, simply press and hold the footswitch for 2 seconds or longer. The LED will blink twice rapidly. Then the recording will be deleted.

How to Redo recordings

- If you delete your last recording but you want it back ,you can restore it by simply press and hold the footswitch for 2 seconds or longer. The LED will blink twice rapidly. Then the recording will be restored.

How to stop/start/delete the loops

- To stop the loop playback, press the footswitch twicequickly. The LED will start blinking in BLUE.To start the loop again, press the footswitch once.
- To delete everything you have recorded, press the footswitch twice quickly and hold down on the second press. The LED will turn off, indicating all the loop data have been deleted.

Specification

Maximun loop length: 30 minutes

Maximun number of overdubs: Unlimited

Input: 1/4" monaural jack (impedance: 470k Ohms)

Output: 1/4" monaural jack (impedance: 100 Ohms)

Power Requirements: AC adapter 9V DC (center minus plug), recommended to use Mooer Micro Power

Current Draw: 140mA

Dimensions: 93.5mm (D) × 42mm (W) × 52mm (H)

Weight: 140g

Accessories: Owner's Manual

** Disclaimer: Any specification's update won't be amended in this manual.*