

 
 
Montaggio

Lista delle parti


- 
6
- 
7
- 
8
- 
9
- 
10
- 
11
- 
6
- 
7
- 
8
- 
9
- 
10
- 
11
- 
6
- 
7
- 
8
- 
9
- 
10
- 
11
- 
6
- 
7
- 
8
- 
9
- 
10
- 
11
- 
6
- 
7
- 
8
- 
9
- 
10
- 
11
- 
6
- 
7
- 
8
- 
9
- 
10
- 
11
- 
6
- 
7
- 
8
- 
9
- 
10
- 
11
- 
6
- 
7
- 
8
- 
9
- 
10
- 
11




Adattatore di Alimentazione

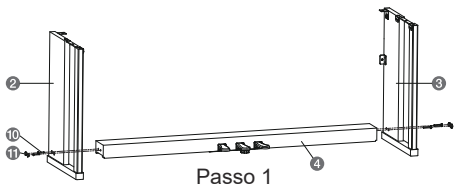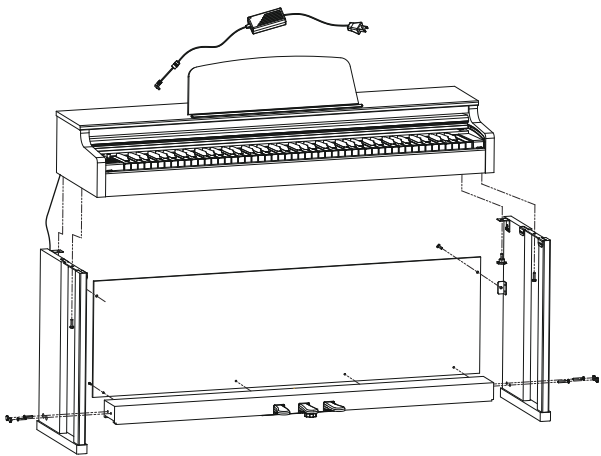


Passo 1

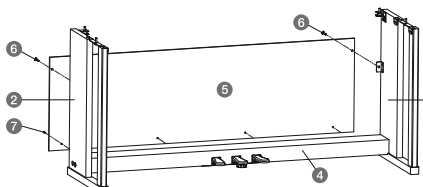 

Passo 2

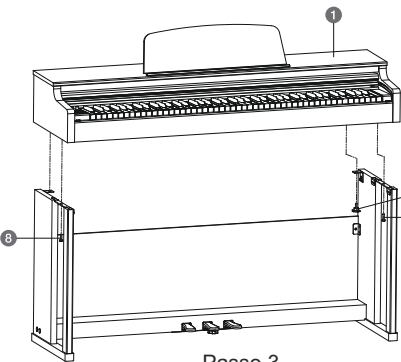 

Passo 3


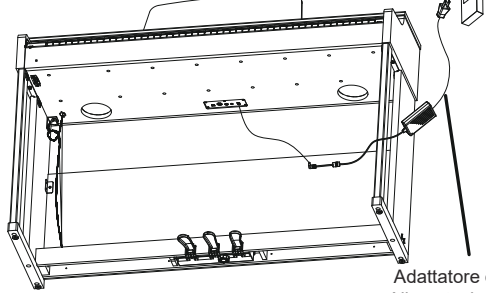 


Passo4

Adattatore di Alimentazione

UP-203
UPRIGHT PIANO
Manuale Utente

  Connessioni

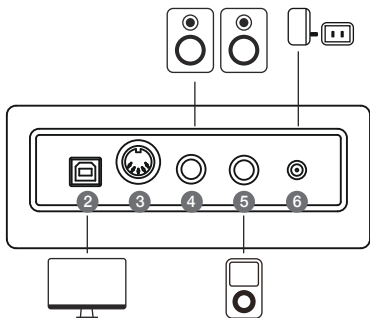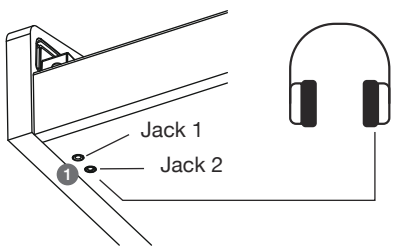

1. **Jacks CUFFIE**

Per collegamento Cuffie.

Quando le cuffie sono collegate al Jack 1, il suono può essere ascoltato dalle cuffie e dagli altoparlanti.

Quando le cuffie sono collegate al Jack 2, gli altoparlanti interni verranno disattivati. Il suono può essere ascoltato solo dalle cuffie.
2. **Jack USB**

Per il collegamento a un computer o a un dispositivo mobile tramite cavo. Potrebbe essere necessario un adattatore aggiuntivo per connettersi ai dispositivi mobili. Questa porta supporta la trasmissione/ricezione sia di dati MIDI che di dati audio digitali. Questo strumento può essere utilizzato per riprodurre la musica riprodotta sul dispositivo esterno oppure utilizzare il dispositivo esterno per registrare la performance dallo strumento.
3. **Jack MIDI OUT**

Per collegare un dispositivo MIDI esterno.
4. **Jack LINE OUT**

Per il collegamento al jack INPUT di apparecchiature audio esterne come un sistema audio stereo.
5. **Jack AUX IN**

Per il collegamento al jack OUTPUT di una sorgente audio esterna come un lettore MP3.
6. **Jack DC IN**

Per collegare l'adattatore di alimentazione incluso.

Nota:
Non ascoltare con le cuffie ad alto volume per lunghi periodi di tempo. Ciò potrebbe danneggiare l'udito.

Lista Suoni

- 1 German Grand

2 Bright German Grand

3 Japanese Grand

4 Warm Grand

5 Electric Grand

6 Honky Tonk

7 Vintage EP

8 Warm EP

9 Reed EP

10 Dark EP

11 FM EP

12 Crystal EP

13 Clavinet

14 Harpsichord

15 Tonewheel Organ

16 Classic Organ

17 Church Organ

18 Accordion

19 Synth Pad

20 Strings

21 Choir

22 Square Lead

23 Saw Lead

24 FM Pad

25 Bell

26 Celesta

27 Nylon Guitar

28 Electric Bass

29 Acoustic Bass

30 Synth Bass

Lista Metronomo / Ritmi

- 1 Simple Count

2 4/4 Beat

3 2/4 Beat

4 3/4 Beat

5 3/8 Beat

6 6/8 Beat

7 5/4 Beat

8 5/8 Beat

9 7/8 Beat

10 10/8 Beat

11 8Beat 1

12 8Beat 2

13 16Beat 1

14 16Beat 2

15 Rock

16 Ska

17 Slow Rock

18 70's Rock

19 Texas Rock

20 Sweet Ballad

21 6/8 Soul

22 Fusion Shuffle

23 Adult Ballad

24 Organic Ballad

25 Tango
- 26 Slow Waltz

27 Cha Cha

28 Rumba

29 Samba

30 Techno 1

31 Hip Hop

32 Techno 2

33 Classic Disco

34 Funk 1

35 Funk 2

36 Swing 1

37 Swing 2

38 Funky Jazz

39 Bernard Shuffle

40 Bluegrass

41 Country Step

42 Country Folk

43 Bossa Nova

44 Latin

45 Mambo

46 Waltz

47 Vienna Waltz

48 Polka

49 March

50 6/8 March

Lista Song

- 1 Sonata No.17

2 Sonata No.14

3 Sonata No.8

4 Sonata No.25

5 Sonata No.20

6 Fur Elise

7 Menuett G-Dur 4

8 Prelude C Major

9 Prelude No.2

10 Gavotte No.5

11 Minuet G Major

12 Prelude C-Sharp

13 Prelude E Major

14 Prelude C Minor

15 Invention No.13

16 Invention No.1

17 Sonata K.545 1st

18 Sonata K.333 1st

19 Sonata K.333 3rd

20 Rondo alla Turca

21 Ah, Vous Dirai-je

22 Perpetuum Mobile

23 Impromptu

24 Moments Musicaux

25 Serenade

26 Arabesque

27 La Chevaleresque

28 Tarentelle

29 La Gracieuse

30 Sonatina Op.36-1

31 Sonatina Op.36-2

32 Sonatina Op.36-3

33 Sonatina Op.36-4
- 34 Etude C Major

35 Etude E Major

36 Black Key

37 Revolutionary

38 Etude A-Flat

39 Etude F Minor

40 Nocturne B-Flat

41 Nocturne E-Flat

42 Nocturne F Minor

43 Impromptu A-Flat

44 Fantaisie-Improm

45 Raindrop

46 Preludes C Minor

47 Waltz E-Flat

48 Waltz C-Sharp

49 Minute Waltz

50 Mazurkas F Major

51 Sweet Remember

52 May Breezes

53 Spring Song

54 Venetianisches

55 Lost Illusions

56 Barcarolle

57 Christmas

58 Italian Polka

59 Traumerei

60 The Happy Farmer

61 May, Sweet May

62 Winter Time I

63 Intermezzo

64 Brahms Waltz

65 Arabesques No.1

66 Clair De Lune
- 67 Perludes No.8

68 Doctor

69 Reverie

70 Cakewalk

71 Arietta

72 Butterfly

73 Lyric Waltz

74 Schos Gavotte

75 Schos Doll's

76 Gymnopedies

77 Je Te Veux

78 Fast Dance

79 Gypsy Rondo

80 Liebestraum

81 The Sapin

82 Lyric Rondo

83 Humoresque

84 La Priere

85 To A Wild Rose

86 La Fontaine

87 Blumenlied

88 Le Coucou

89 Minuet

90 Warblings

91 Gavotte

92 Dance Steps

93 Salut D'Amour

94 Le Cygne

95 La Paloma

96 Rialto Ripples

97 Chicken Pecking

98 Maple Leaf Rag

99 Entertainer

100 Peacherine

