

ASSEMBLY INSTRUCTION

NC*FRX & NC*MRX | XLR Cable Connector


Ⓐ

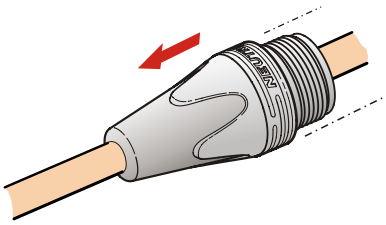


Ⓑ

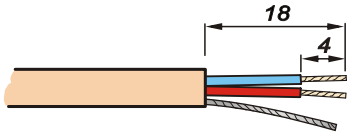


Ⓒ

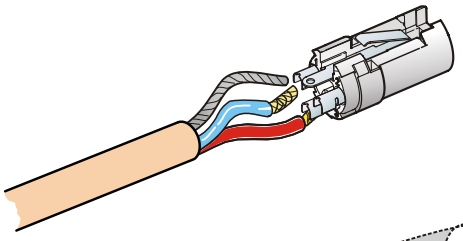


Ⓓ

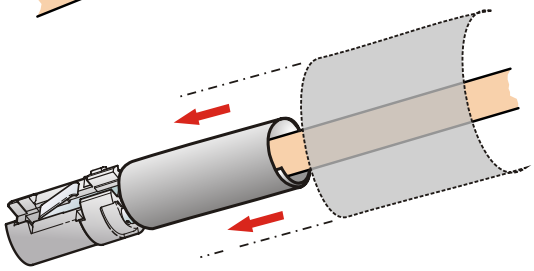

Ⓔ

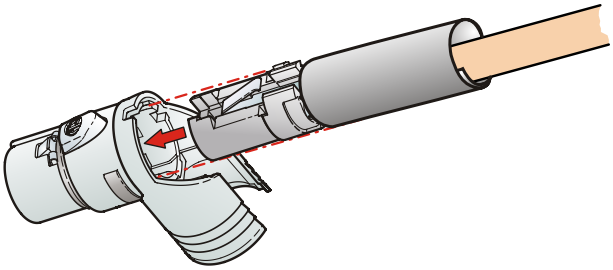

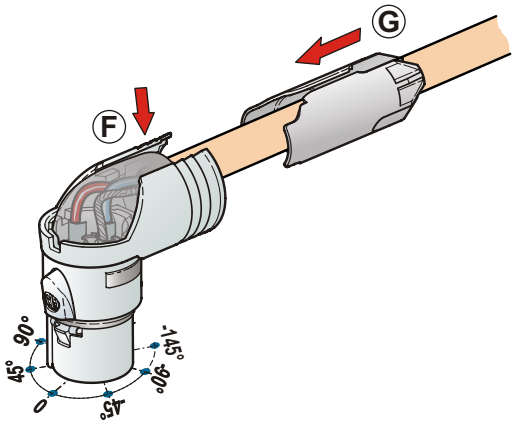

Ⓐ **Slide the boot onto the cable.**

Ⓑ **Prepare cable as shown.**

Ⓒ **Insert wires into the terminals and solder them.**

Ⓓ **Position the sleeve over the cables.**


Ⓔ **Slide insert into the housing until it snaps in.**

Align insert with housing.

Ⓕ **Position the cable.**

Ⓖ **Slide the chuck into the housing.**


Pay attention to position chuck as shown.

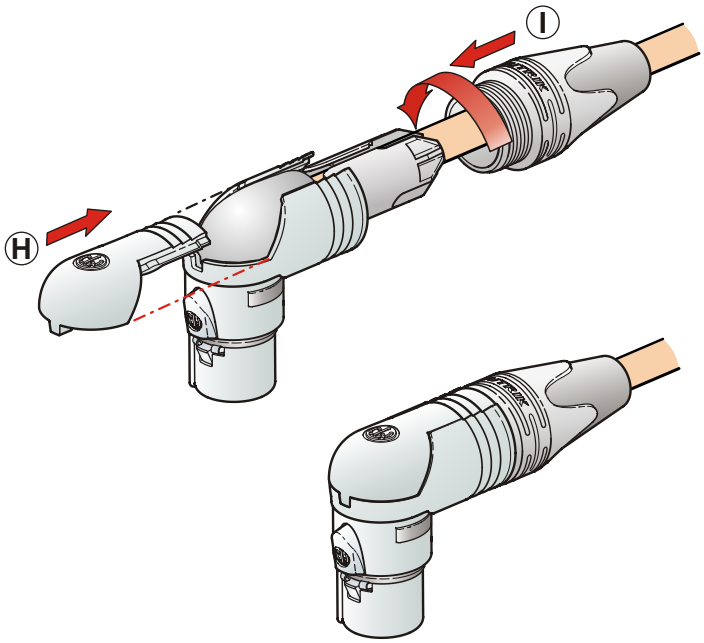

Ⓗ **Position the cover.**

Before placing the cover choose the orientation of cable outlet by turning housing.

Ⓘ **Finish the assembly by turning the bushing onto the connector.**

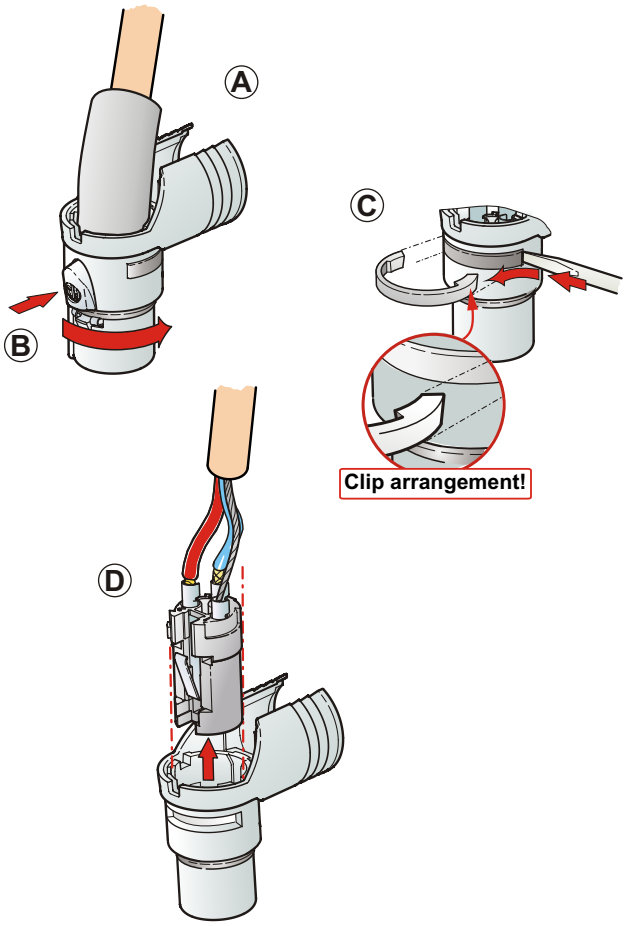

Disassembly of the insert

Ⓐ **Remove cover and chuck.**

Ⓑ **Push latch and turn housing approx. a half turn until housing can be separated.**

Ⓒ **Lift the locking clip by help of a screw driver.**

Ⓓ **Remove insert.**

NEUTRIK AG	**LI**	**T:** +423 / 237 24 24	**F:** +423 / 232 53 93
NEUTRIK USA Inc.	**USA**	**T:** +1 704 / 972 3050	**F:** +1 704 / 438 9202
NEUTRIK (UK) Ltd.	**UK**	**T:** +44 1983 / 811 441	**F:** +44 1983 / 811 439
NEUTRIK Vertriebs GmbH	**DE / NL / AT / DK**	**T:** +49 8131 / 280 890	**F:** +49 8131 / 280 830
NEUTRIK France	**FR**	**T:** +33 1 / 4131 6750	**F:** +33 1 / 4131 0511
NEUTRIK Tokyo Ltd.	**JP**	**T:** +81 3 / 3663 4733	**F:** +81 3 / 3663 4796
NEUTRIK Hong Kong Ltd.	**HK**	**T:** +852 / 2687 6055	**F:** +852 / 2687 6052

Draft. Nr.: BDA 173-0 / 3102M1441 | **Update: 13.07.2011** | Data subject to change without prior notice. ©2011 NEUTRIK® . ALL RIGHTS RESERVED.